

INSTRUCTIONS AND WARRANTY VIREO

Technical data

Please visit www.kiteoptics.com for all technical data and descriptions of the VIREO.

Warranty


VIREO – 5 year warranty

Delivery


- Binoculars
- Soft-case
- Carrying strap for binoculars
- Carrying strap for soft-case
- Protective eyepiece caps
- Warranty card

The VIREO

1 eyecups – 2 diopter adjustment wheel – 3 eyelets for carrying strap – 4 focusing wheel
6 objective protection caps – 7 ocular protection cap

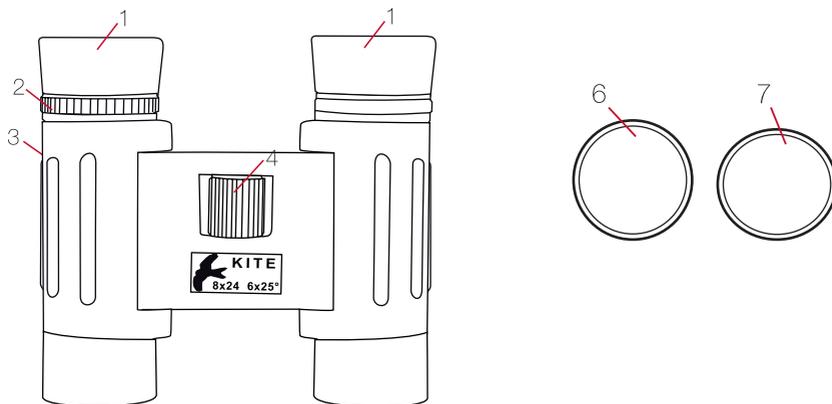


1. Attaching the carrying strap (3)

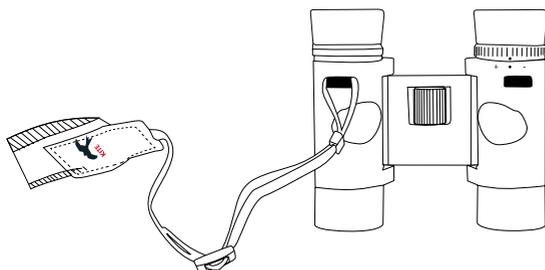

2. Adjusting the eyecups for use with and without spectacles (1)

Turn the eyecup counterclockwise (up) for observation without spectacles.

Turn the eyecups clockwise (down) for observation with spectacles.

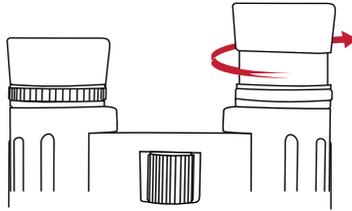

3. Adjustment of interpupillary distance

To see a single round image, turn the two halves of the binoculars until no irritating shadows can be seen.



4. Adjustment of focusing (4)

By turning the focusing wheel you can focus any object sharply from closely to infinity.

5. Dioptic compensation (2)

To achieve optimal image quality, the possibly varying visual acuity between the left and right eye must be corrected.

Use without eyeglasses and equal acuity of both eyes, or with eyeglasses.

Place the diopter adjustment wheel in the middle position.

Use without eyeglasses and varying acuity.

1. Look through the left ocular with your left eye and turn the focusing wheel to focus sharply on a selected object.
2. Now look at the same object through the right ocular with your right eye and again create a sharp image of this object by turning the diopter adjustment wheel only.

Now the dioptic correction has been set for your particular visual acuity.

